

D6095 Adjustable friction mortice restraining stay 495mm Channel



The position of the headplate and channel in relation to the axis of the butt hinge will determine the limitation of the opening.

The opening angles may vary slightly depending on the hinge specified and thickness of door.

Note:

Place the spring buffer in the channel nearest to the hanging edge with the friction adjustment block away from the arm allowing access to the adjustment screws when the door is open.



